



FTM

Frost protection thermostat to protect the heat exchanger

The frost protection thermostat is mounted directly on the heat exchanger of the air curtain and provides reliable protection against frost damage. A 1-metre-long capillary tube sensor measures the temperature at the heat exchanger.

As soon as the temperature falls below the preset threshold value of 7°C, the thermostat sends a signal to the control board. This automatically opens all connected valves and switches off the fans to prevent the heat exchanger from cooling down.